


Rivergate Distributing

WWW.RivergateDist.com


102 Adams Park
Nashville, Tn 37205
615-292-1260

The Following is the correct way to adjust the voltage on the RDC-SLOT Power Supply


Make note of the screws to Loosen !

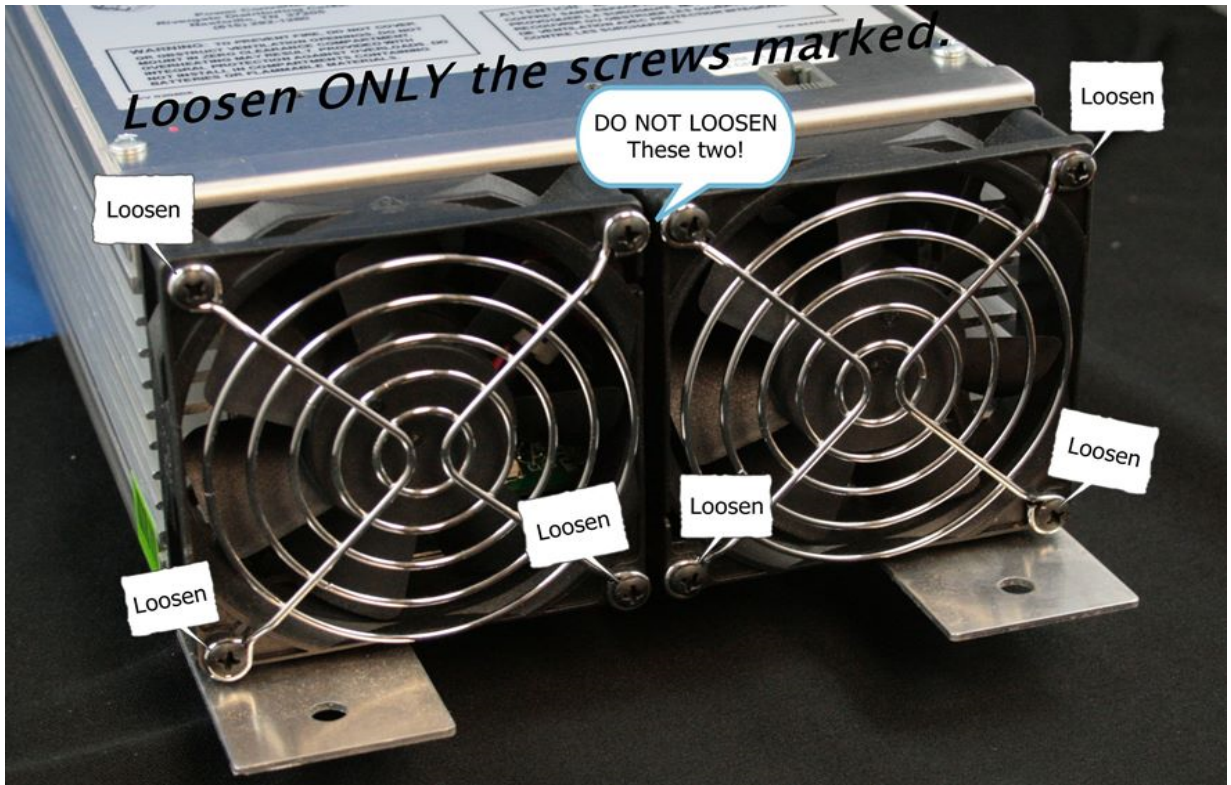


Next Loosen only those screws as shown in picture
Loosen them only, do not remove them.

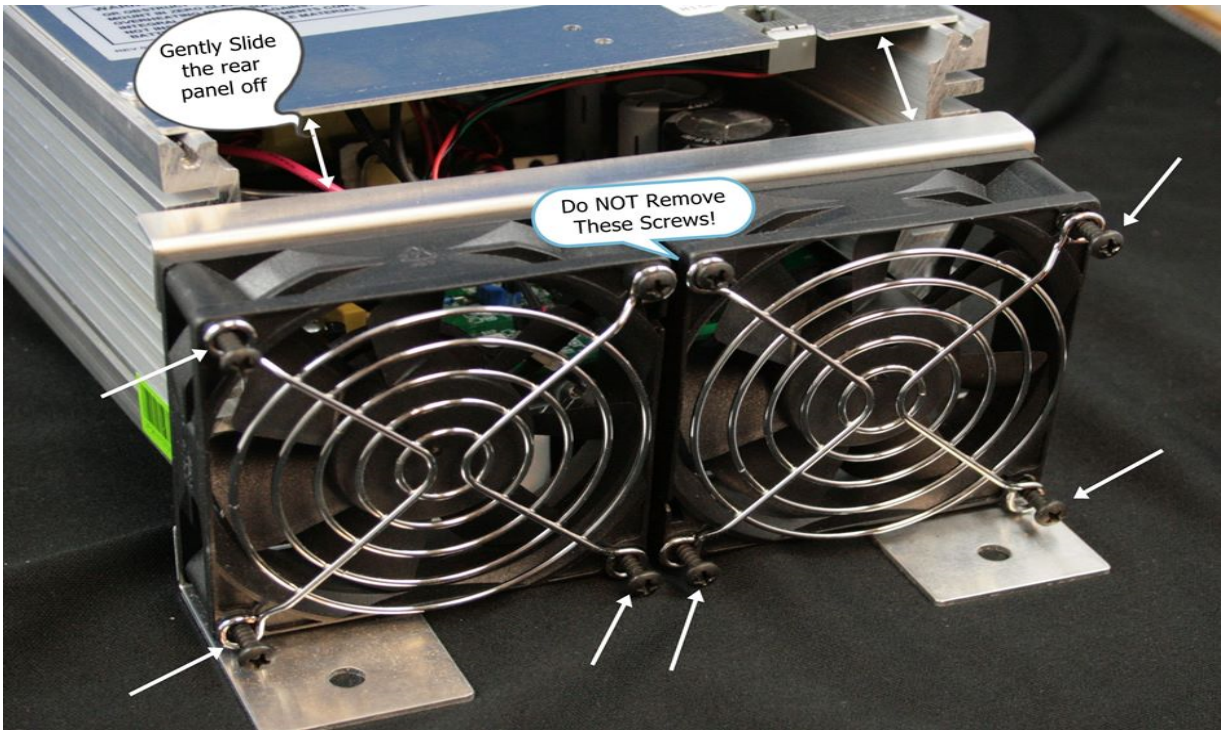

Slide Right Side out Gently..


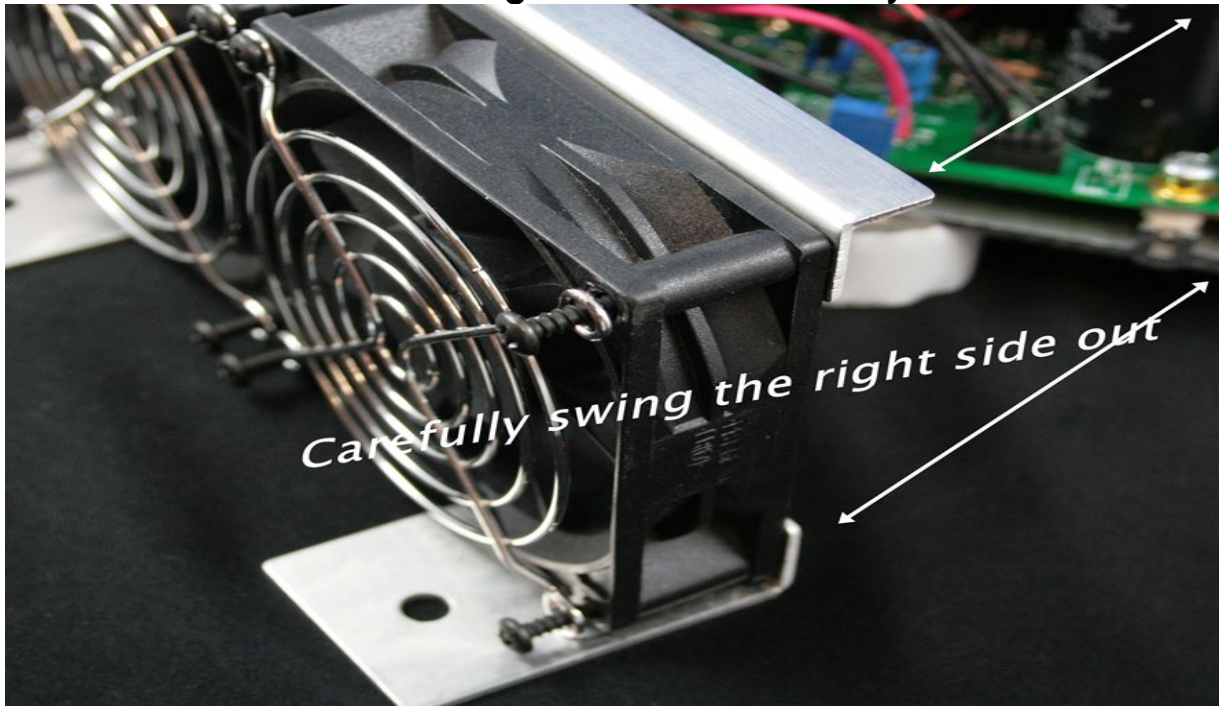


Next locate the little adjustment pot. near the center of the board.

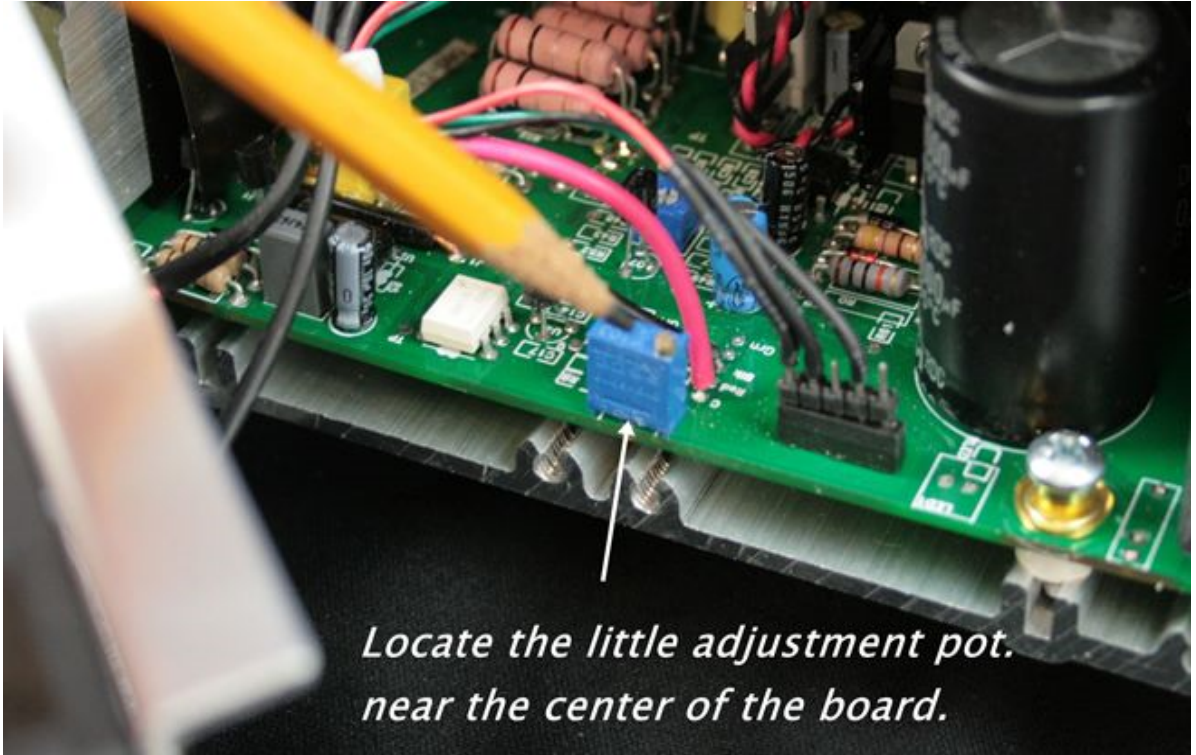


*Locate the little adjustment pot.
near the center of the board.*

Next you will be adjusting the voltage.
Connect your voltmeter to the output.
Make sure the Jumper for 16 volts is in.

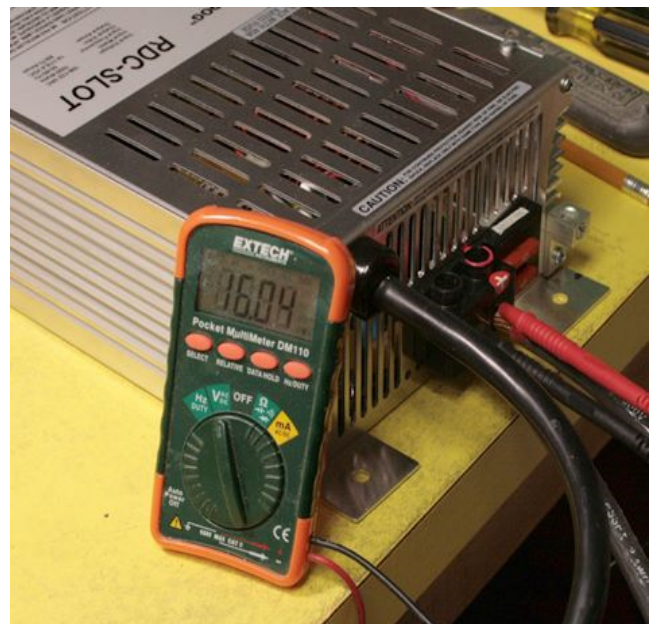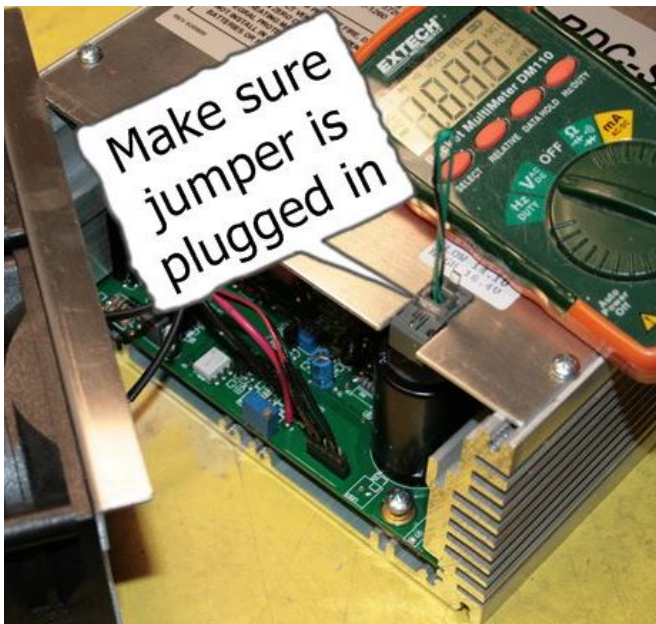

Voltage can only be adjusted over a very narrow range..

Using a very fine screwdriver, carefully adjust the screw
being careful not to force it. DO NOT FORCE SCREW!

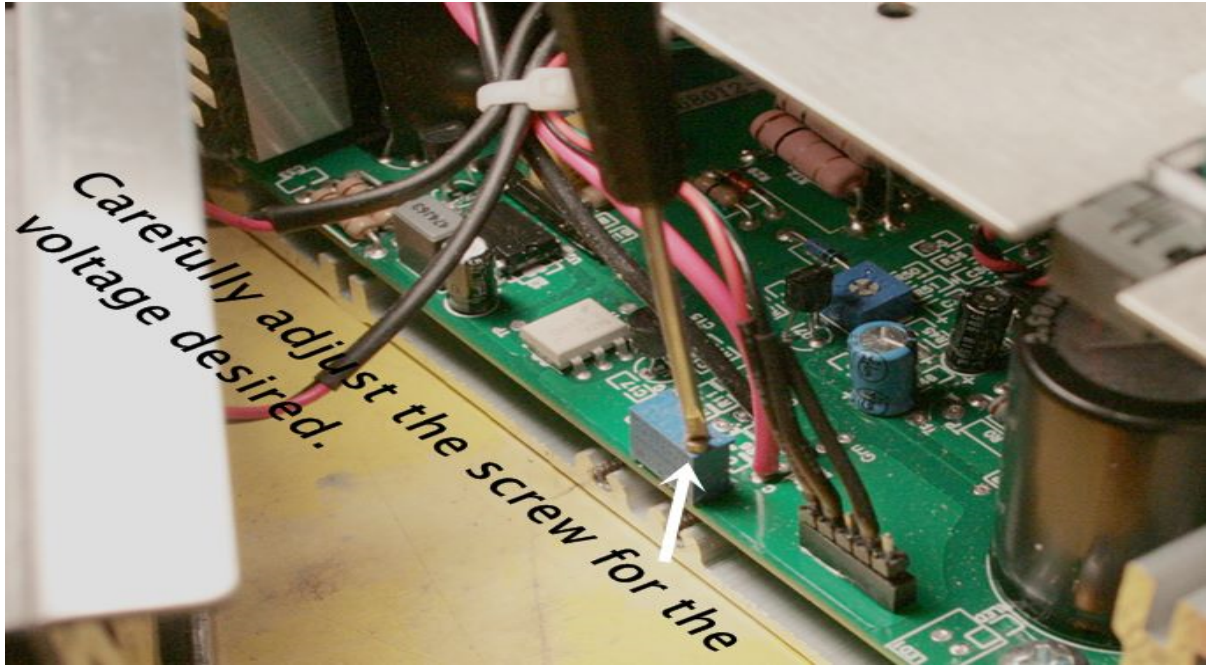

Please note that these photos show the newer design that has been in production for some time. This newer design has a top adjustment screw that is more precise.

Re-assemble the unit by sliding the rear panel back into place and tightening the screws you loosened.

Rivergate Distributing will not
warranty damaged adjustment pots!
Adjust at your own Risk !

The older design will be shown at the end of this document.